



IMPORTANT!


Failure to bag the remote controller will void the warranty!

Procedure for Bagging the Controller:

1. Place controller in plastic bag. (Zip lock sandwich bags work great for wireless.)
2. Twist the top of the plastic bag above the rubber boot on the cord.
3. Secure the top of bag with electrical tape.

Be sure to overlap the ends of the bag with the electrical tape, securing it tightly onto the cord.

Remove the bag at the end of day, wipe it down with a damp cloth and allow it to air dry. Remember, **ALWAYS BAG THE REMOTE WHEN IN USE!**

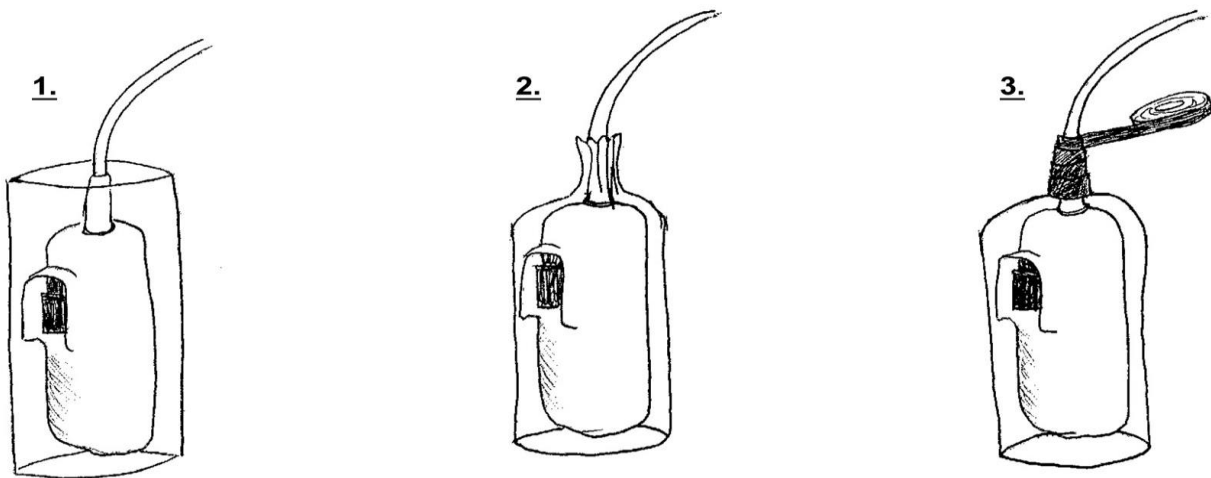

For answers to questions on the use and care of your EAZE OFF™ please email us at support@easeoff.com